



SHERWOOD INDUSTRIES IS AN ENVIRONMENTALLY RESPONSIBLE COMPANY. THIS MANUAL IS PRINTED ON RECYCLED PAPER.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE



# Westgate

LUXURY FIREPLACES

# DV48

BY: SHERWOOD INDUSTRIES LTD

# OWNER'S MANUAL

WARRANTY REGISTRATION  
enviro.com/warranty

## INSTALLER:

Leave this manual with the appliance.

## CONSUMER:

Retain this manual for future reference.

## WHAT TO DO IF YOU SMELL GAS

- Open windows/extinguish any open flame.
- Do not try to light any appliance.
- Do not touch any electrical switch or use any phone in your building.
- Immediately call your gas supplier from a neighbour's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.



**FOR YOUR SAFETY: Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance.**

**WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life. Installation and service must be performed by a qualified installer, service agency or the gas supplier.**

This appliance may be installed in an after-market permanently located, manufactured (mobile) home, where not prohibited by local codes.

This appliance is only for use with the type of gas indicated on the rating plate. This appliance is not convertible for use with other gases, unless a certified kit is used.



Massachusetts installations (Warning): This product must be installed by a licensed plumber or gas fitter when installed within the Commonwealth of Massachusetts. Other Massachusetts code requirements: Flexible connector must not be longer than 36in., a shut off valve must be installed; only direct vent sealed combustion products are approved for bedrooms/bathrooms. A carbon monoxide detector is required in all rooms containing gas fired direct vent appliances. The fireplace damper must be removed or welded in the open position prior to installation of a fireplace insert.

# SAFETY PRECAUTIONS

FOR SAFE INSTALLATION AND OPERATION OF YOUR "WESTGATE" HEATER, PLEASE CAREFULLY READ THE FOLLOWING INFORMATION:

- All Westgate gas-fired appliances must be installed in accordance with their instructions. Carefully read all the instructions in this manual first. Consult the building authority having jurisdiction to determine the need for a permit prior to commencing the installation.

- **NOTE:** Failure to follow these instructions could cause a malfunction of the fireplace, which could result in death, serious bodily injury, and/or property damage.

- Failure to follow these instructions may also void your fire insurance and/or warranty.

## GENERAL

- Installation and repair should be done by a qualified service person. The appliance should be inspected before the first use and, at least, annually by a qualified service person. More frequent cleaning may be required due to excessive lint from carpeting, bedding material, etc. It is imperative the control compartments, burners and circulating air passageways of the appliance be kept clean.

- Due to high temperatures, the appliance should be located out of high traffic areas and away from furniture and draperies.

**Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burn or clothing ignition.**

- Young children should be carefully supervised when in the same room as the appliance. Toddlers, young children and others may be susceptible to accidental contact burns. A physical barrier is recommended if there are at risk individuals in the house. To restrict access to a fireplace or stove, install an adjustable safety gate to keep toddlers, young children and other at risk individuals out of the room and away from hot surfaces.

- Clothing or other flammable materials should not be placed on or near the appliance.

## FOR YOUR SAFETY

- Installation and service must be performed by a qualified installer, service agency or gas supplier.

- This installation must conform to local codes or, in the absence of local codes, to the current CAN/CSA-B149.1 Natural Gas and Propane Installation Code (Canada) or National Fuel Gas Code ANSI Z223.1.2 (USA)

- To prevent injury, do not allow anyone who is unfamiliar with the stove to operate it.

**• To prevent injury, if the pilot or pilot and burners have gone out on their own, open the glass door and wait 5 minutes to air out before attempting to re-light the stove.**

- Always keep the area around these appliances clear of combustible material, gasoline and other flammable liquids and vapours.

- These appliances should not be used as a drying rack for clothing or for hanging Christmas stockings/decorations.

- Due to the paint curing on the stove, a faint odor and slight smoking will likely be noticed when the stove is first used. Open a window until the smoking stops.

Always connect this gas stove to a vent system and vent to the outside of the building envelope. Never vent to another room or inside the building. Make sure the specified vent pipe is used, properly sized and of adequate height to provide sufficient draft. Inspect the venting system annually for blockage and signs of deterioration.

**WARNING:** Failure to position the parts in accordance with the diagrams in this booklet, or failure to use only parts specifically approved with this appliance, may result in property damage or personal injury.

**WARNING:** Do not operate with the glass front removed, cracked or broken. Replacement of the glass should be done by a licensed or qualified service person.

- Never use solid fuels such as wood, paper, cardboard, coal, or any flammable liquids, etc., in this appliance.

- Do not use this heater if any part has been under water. Immediately call a qualified service technician to inspect the heater and to replace any part of the control or gas control systems that have been under water.

- Do not abuse the glass by striking it or slamming the door shut.



# TABLE OF CONTENTS

---

Safety Precautions.....	2
Table of Contents.....	3
Codes And Approvals.....	4
Specifications.....	5
Dimensions.....	5
Rating Label .....	6
Door Removal and Installation.....	7
Installation Set-Up.....	7
Firebox Liner Installation.....	7
Log Burner / Ember Bed Installation.....	9
Log Set Installation.....	10
Glass Burner Installation.....	12
Porcelain Panel Kit Installation.....	14
Optional Front Installation.....	16
Start-Up & Operation.....	18
Normal Sounds During Operation.....	18
Remote Control Operations.....	18
Technical Data.....	18
System Description.....	18
Wall Mounting The Receiver.....	20
Operating Procedure.....	20
Air Shutter Adjustment.....	23
Check for Proper Burner Flame.....	24
Service / Maintenance.....	25
Lighting Instruction Label.....	25
Air Intake.....	25
Light Bulb Replacement.....	26
Cleaning / Annual Service.....	26
Cleaning The Glass.....	26
Replacing Glass.....	26
Burner & Firebox Cleaning.....	26
Warranty.....	27
Installation Data Sheet.....	28

# CODES AND APPROVALS

**DIRECT VENT ONLY:** This type is identified by the prefix DV. This appliance draws all of its air for combustion from outside the dwelling, through a specially designed vent pipe system.

This appliance has been tested and approved for installations from 0 feet to 4500 feet (1372 m) above sea level.

**In the USA:** The appliance may be installed at higher altitudes. Please refer to your American Gas Association guidelines which state: the sea level rated input of Gas Designed Appliances installed at elevations above 2000 (610 m) feet is to be reduced 4% for each 1000 feet (305 m) above sea level. Refer also to National Fuel Gas Code, ANSI Z223.1/ NFPA 54, local authorities, or codes which have jurisdiction in your area regarding the de-rate guidelines.

**In Canada:** When the appliance is installed at elevations above 4500 feet (1372 m), the certified high altitude rating shall be reduced at the rate of 4% for each additional 1000 feet (305 m). Refer also to CSA-B149.1 Natural Gas and Propane Installation Code, local authorities, or codes which have jurisdiction in your area regarding the de-rate guidelines.

- This appliance has been tested by INTERTEK TESTING SERVICES NA LTD. and found to comply with the established VENTED GAS FIREPLACE HEATER standards in CANADA and the USA as follows:

## VENTED GAS FIREPLACE HEATER (DV48; NG/LPG)

TESTED TO: ANSI Z21.88a-2007/CSA 2.33a-2007 VENTED GAS FIREPLACE HEATERS  
CAN/CGA 2.17-M91 GAS FIRED APPLIANCES FOR HIGH ALTITUDES  
CSA P.4.1-02 TESTING METHOD FOR MEASURING ANNUAL FIREPLACE EFFICIENCY

### This Westgate DV48 Fireplace:

- Has been certified for use with either natural or propane gases. (See rating label.)
- Is not for use with solid fuels.
- Is approved for bedroom or bed sitting room. (**IN CANADA:** must be installed with a listed wall thermostat. **IN USA:** see current ANSI Z223.1 for installation instructions.)
- Must be installed in accordance with local codes. If none exist, use current installation code CAN/CSA-B149.1 Natural Gas and Propane Installation Code (Canada in Canada or ANSI Z223.1/NFPA 54 in the USA).
- Must be properly connected to an approved venting system and not connected to a chimney flue serving a separate solid-fuel burning appliance.
- The flow of combustion and ventilation air not be obstructed.

**IMPORTANT NOTICE (Regarding first fire up):** When the unit is turned on for the first time, it should be turned onto high without the fan on for the first 4 hours. This will cure the paint, logs, gasket material and other products used in the manufacturing process. It is advisable to open a window or door, as the unit will start to smoke and can irritate some people. After the unit has gone through the first burn, turn the unit off including the pilot, let the unit get cold then remove the glass door and clean it with a good gas fireplace glass cleaner, available at your local WESTGATE dealer.

NATIONAL  
FIREPLACE  
INSTITUTE®




CERTIFIED

[www.nficertified.org](http://www.nficertified.org)

We recommend that our gas hearth products be installed and serviced by professionals who are certified in the U.S. by the National Fireplace Institute® (NFI) as NFI Gas Specialists.

# SPECIFICATIONS


## DIMENSIONS:

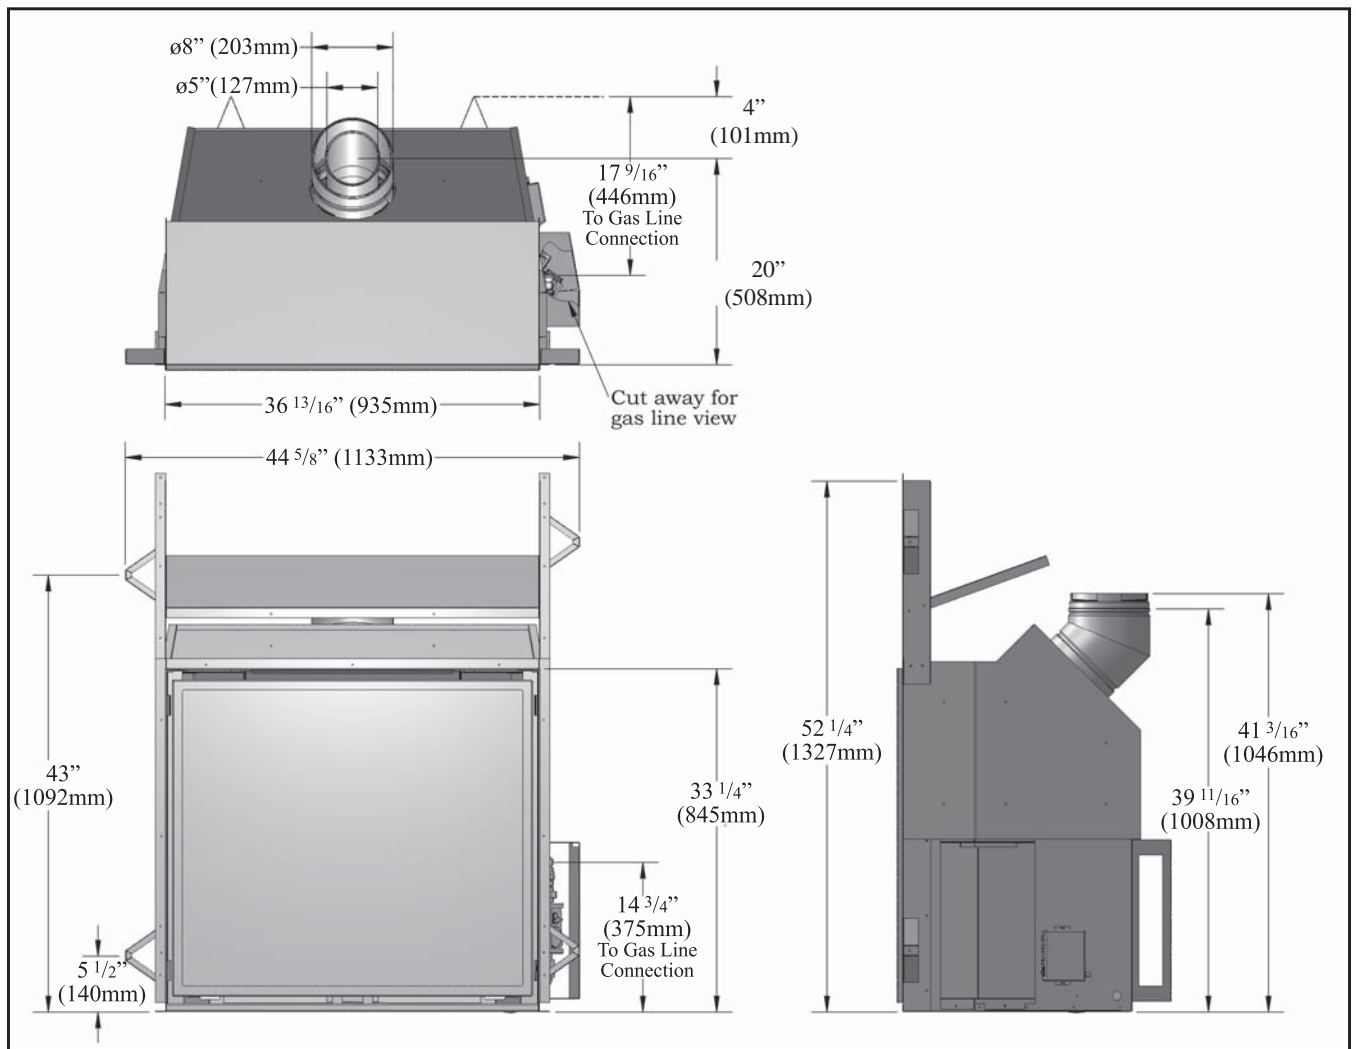

**Figure 1. Dimensions of the Firebox.**

## RATING LABEL LOCATION:

The Rating and Lighting instruction label is located below the door frame, underneath the firebox attached to a chain. To access the label, slide the plate forward out from under the firebox. Always return it when finished.

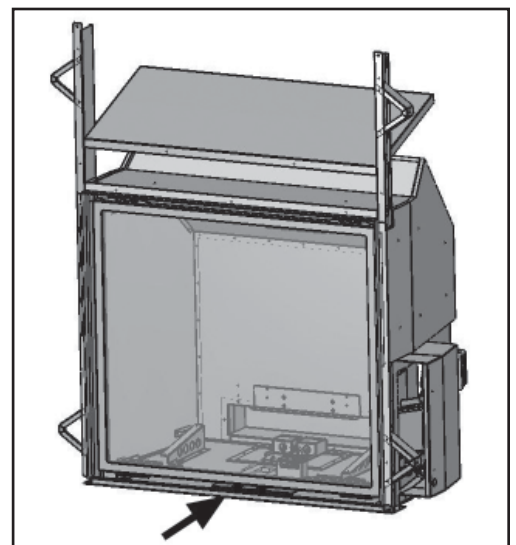

**Figure 2. Rating/Lighting Label Location.**


**RATING LABEL:**

**Figure 3. Rating Label.**


# INSTALLATION SET-UP

## DOOR REMOVAL AND INSTALLATION:


- 1) The fireplace door is hung on two (2) hooks on the top of the firebox. The two (2) door latches at the bottom of the firebox hook over the tabs on the bottom of the door frame.
- 2) Lower the door latch tool underneath the door frame. Catch the lower door latch with the door latch tool (see Figure 5) and pull it out slightly, then down. Once the lower door latch clears the tab on the bottom of the door frame, release it inwards and then remove the door latch tool. Refer to Figures 6 & 7.
- 3) Pull the Door Frame at the bottom forward about 2" (5cm), then lift the Door Frame upwards to clear the Upper Door Hooks. Refer to Figures 7 & 8.

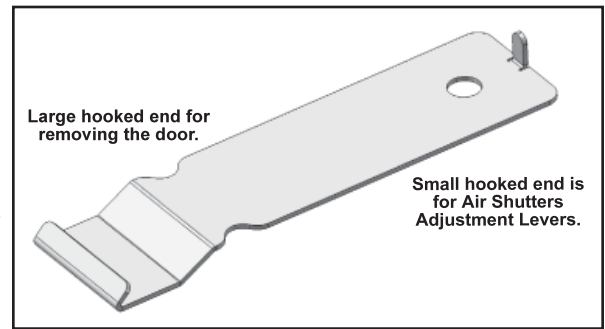


**Figure 4: Door Latch / Air Adjustment Tool.**

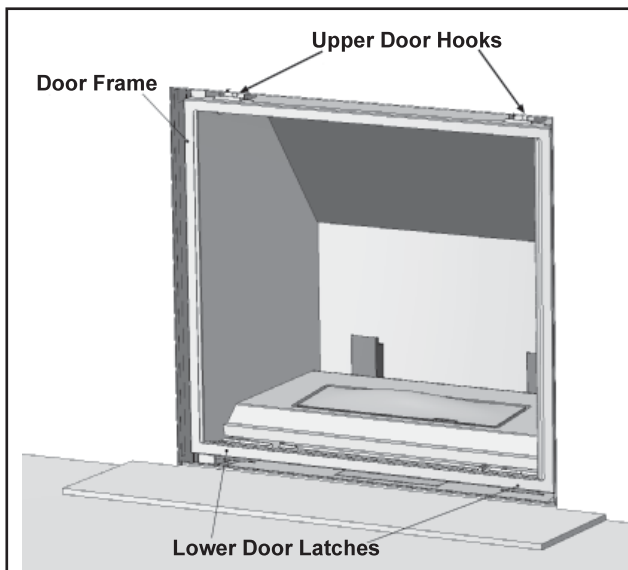


**Figure 5: Door Latch Locations.**

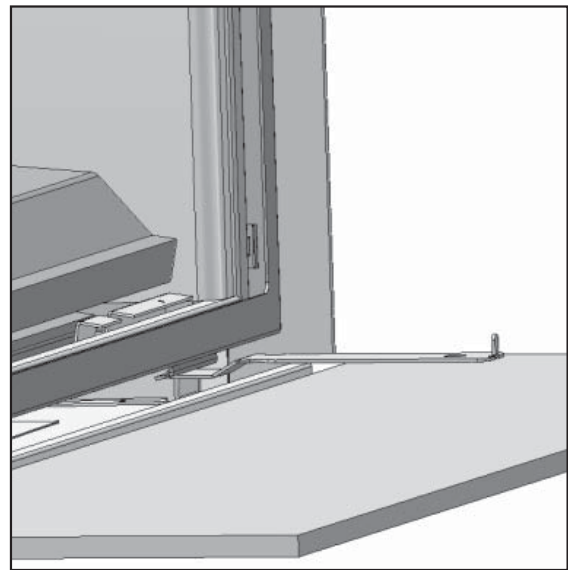

**Figure 6: Door Latch Tool in Place.**

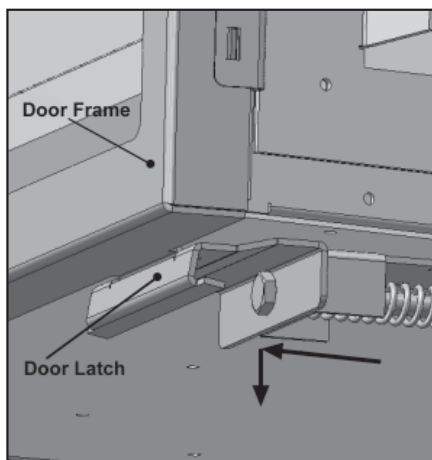

**Figure 7: Door Latch Locations.**

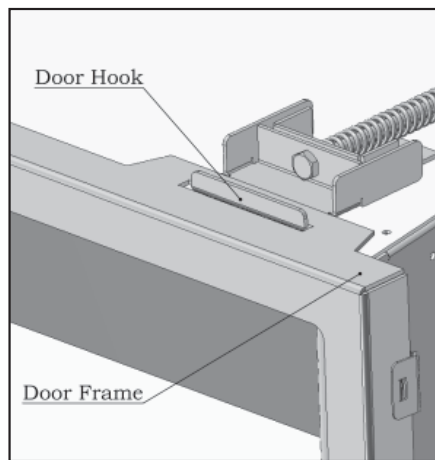


**Figure 8: Top Door Hook.**

- 4) Lift the Door Frame away, being careful that the glass panel is secure within the Door Frame.

## FIREBOX LINER INSTALLATION:


**IMPORTANT:** The paint on the panels may fade for the first 8-10 hours of burn time, but will come back to its color after the paint has cured. The paint is very delicate and handling them with care is necessary not to mark or smudge the paint.

# INSTALLATION SET-UP

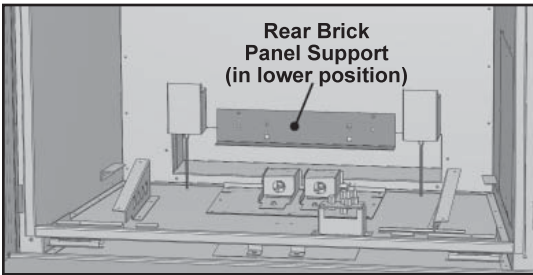


**Figure 9: Rear Brick Panel Support.**

1. Prior to installing the firebox liners, you will need to ensure the Rear Brick Panel Support is in the correct position. The support is located at the back of the firebox (see Figure 9) and can be installed in two (2) positions. The upper position (using the lower screw holes) is for the October Panels. The lower position (using the upper screw holes) is for the Sandstone, LedgeStone, and Porcelain Panels. Remove the Support, if necessary, and move it to the appropriate placement.

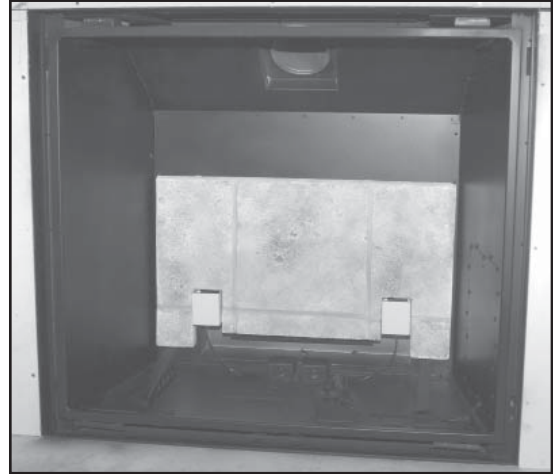


**Figure 10: Rear Firebox Liner Panel in Place.**

2. Ensure the light covers provided with your kit are installed on the Light Cover Bases at the rear of the firebox. The tabs on the back of the Light Cover slide down behind the light cover base. Refer to Figures 44 and 45.
3. Install the Rear Firebox Liner. This panel fits around the accent lights and rests on top of the Rear Brick Panel Support. It will stay in this location as you install the remaining panels. Refer to Figure 10.
4. Install the Left Firebox Liner Panel; it sits on the bottom front edge of the firebox (see Figure 11 & 12), a support bracket at the lower rear of the firebox, and is held in by a retainer at the top of the firebox. Adjust the panel retainers as required.

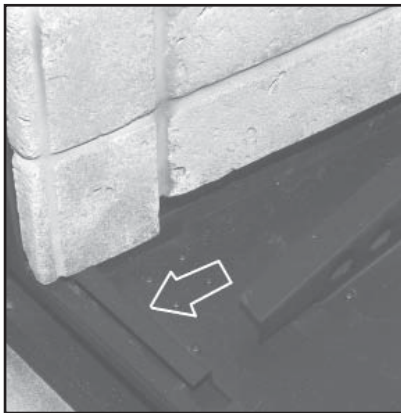

**Figure 11: Left Firebox Liner Panel on Front Edge of Firebox.**

5. Install the Top Panel by placing it on top of the Rear Panel and behind the Left Panel (see Figure 13). Hold it with one hand or have someone else hold it for you while you place the last panel. **WARNING:** If this panel falls from this location it will possibly break or the paint work will become chipped.

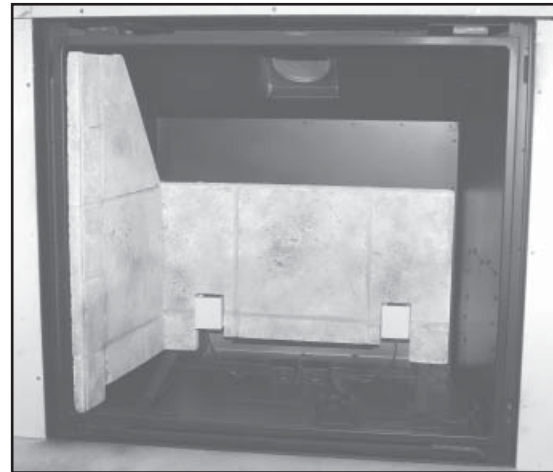

**Figure 12: Left Firebox Liner Panel in Place.**

6. Place the Right Firebox Liner Panel in the same manner used for the Left Panel (see Figure 14). The vertical edges of the left and right panels should line up with the front edges of the firebox sides. The side panels rest up against the back panel and hold the top panel in position.



**Figure 13: Top Firebox Liner Panel in Place.**




**Figure 14: Right Firebox Liner Panel in Place.**


# INSTALLATION SET-UP

## LOG BURNER / EMBER BED INSTALLATION:

1. Use the two (2) T-20 screws provided; install the rear burner shield onto the back of the burner. The mounting holes are just above the mixing tubes at the rear of the burner, refer to Figure 15.

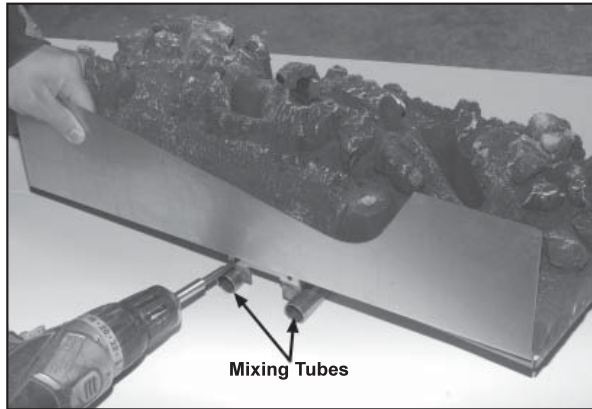


**Figure 15: Installing Rear Burner Shield.**

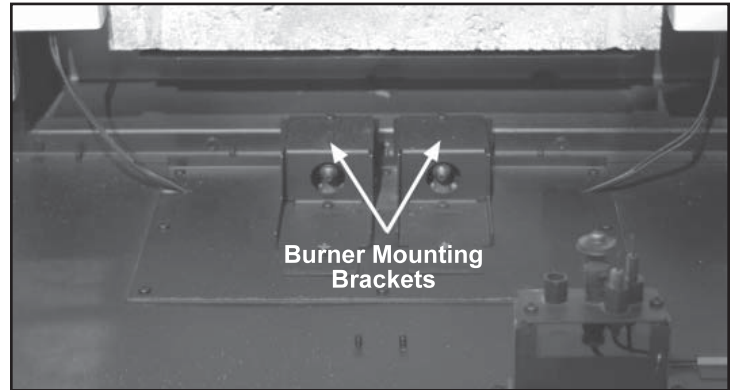


**Figure 16: Burner Mounting Brackets.**


2. In the bottom rear of the firebox there are two (2) gas orifices in a housing that facilitate the air shutter mechanisms and the Burner Mounting Brackets are above them (See Figure 16). There are two (2) mixing tubes underneath the back of the burner (see Figure 15). Lift the burner into the firebox with the back of the burner tilted downward. Keep the burner high enough at the front to clear the pilot assembly. Line up the mixing tubes with the holes in the burner mounting brackets and slowly lower the front of the burner over the pilot assembly (see Figure 17).

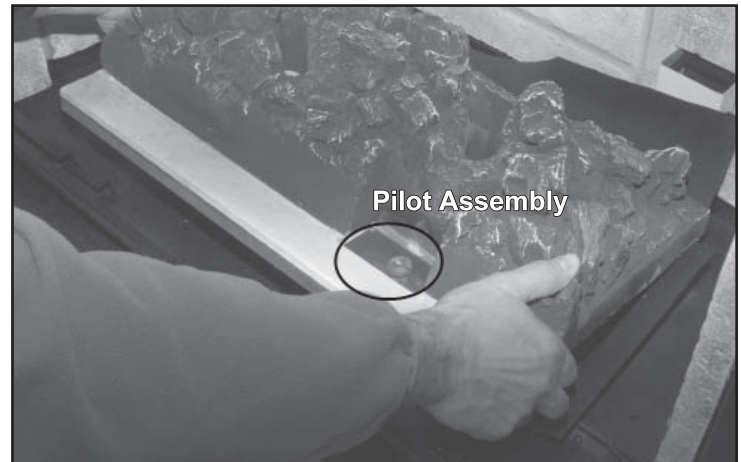

**Figure 17: Log Burner Over Pilot Assembly.**

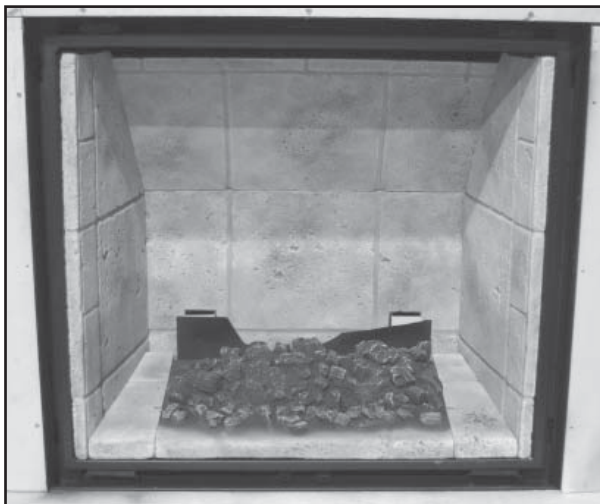

**Figure 19: Burner Accents Pieces in Place.**

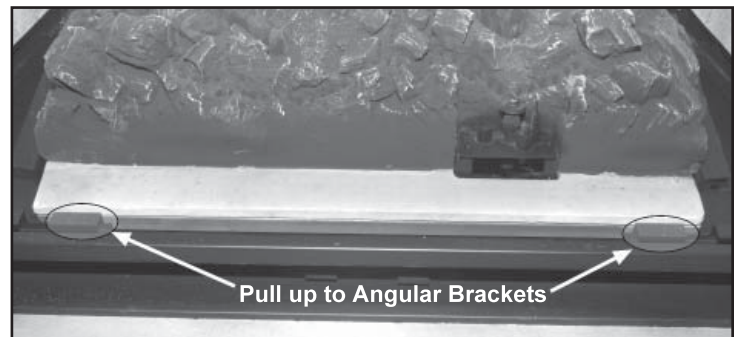


**Figure 18: Log Burner in Place.**


3. Pull the burner forward up to the angular brackets near the front of the firebox (see Figure 18).

**IMPORTANT:** If the burner is not far enough back to lower the burner behind these brackets, then the mixing tubes are not engaged in the air shutter. Failing to ensure the mixing tubes are located in the mixing tube support brackets may cause serious performance and or safety issues.

# INSTALLATION SET-UP

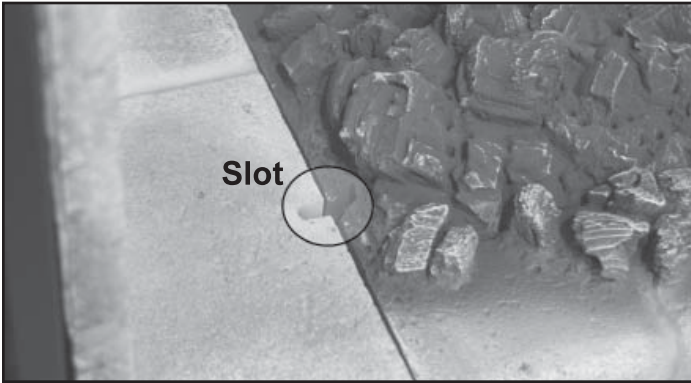


**Figure 20: Slot for Firebox Grate.**

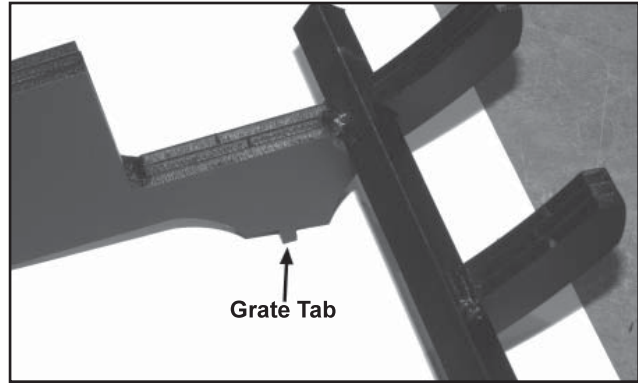

**Figure 21: Tab on Firebox Grate.**


4. Install the burner accent pieces as shown in Figure 19. There are a left, a right and a front ceramic trim. On each side of the burner and on the inside of each burner side accent pieces there is a slot, which should be aligned in order to position the log grate correctly (see Figure 18).
5. The firebox grate has two (2) tabs that run below the feet of the grate (see Figure 21), place the grate over the burner top and carefully inserting the grate tabs into the slots on the burner (see Figure 20 & 22). Once the grate is installed correctly, the burner, grate, and side burner accents will be all locked together.

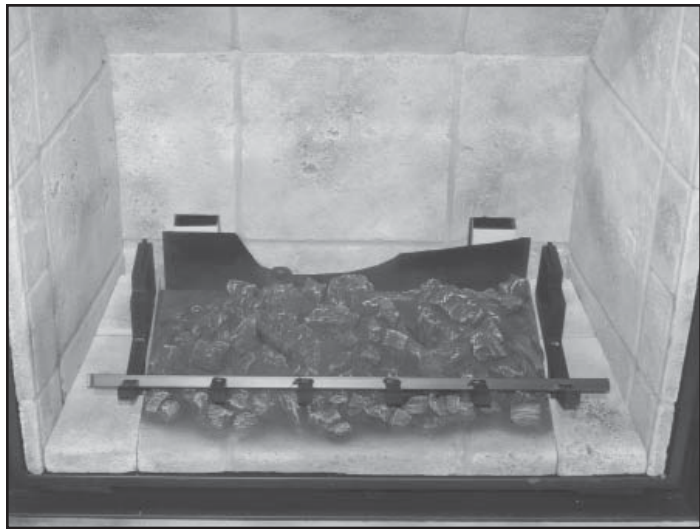


**Figure 22: Firebox Grate in Place.**

## LOG SET INSTALLATION:

**IMPORTANT:** The paint on the logs may fade for the first 8-10 hours of burn time, but will come back to its color after the paint has cured. The paint is very delicate and handling them with care is necessary not to mark or smudge the paint.

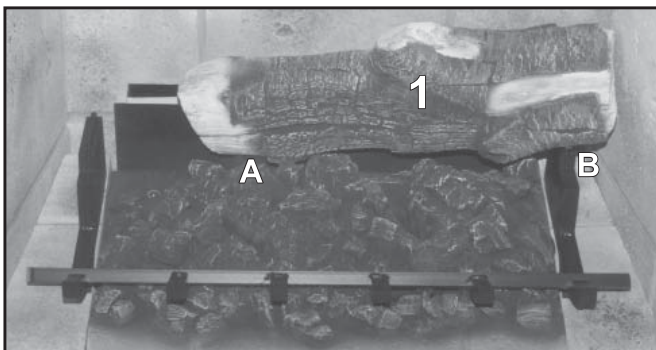

**Figure 23: Log 1 in Place.**

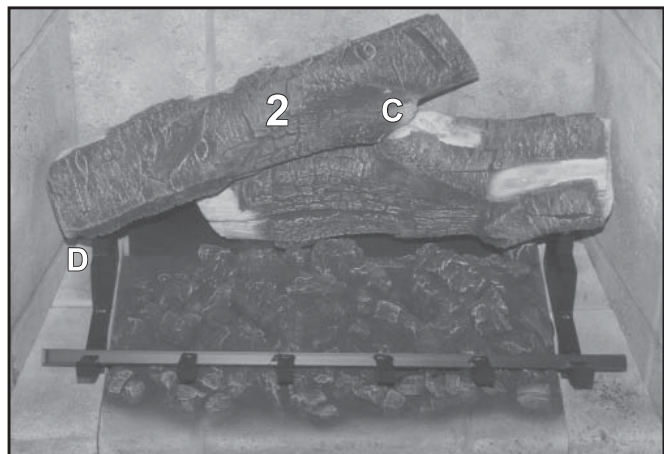


**Figure 24: Log 2 in Place.**


1. Install Right Rear Log. The right side sits on the grate with the groove on the bottom of the log fitting onto the top of the grate (see Figure 23).

Insert the log pin into the top of the ember burner (see A in Figure 23). Align the log front edge with the front section of the grate (see B in Figure 23).


# INSTALLATION SET-UP

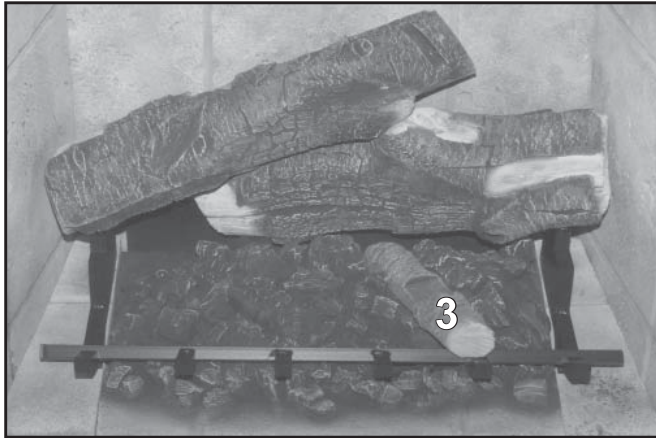

**Figure 25: Log 3 in Place.**

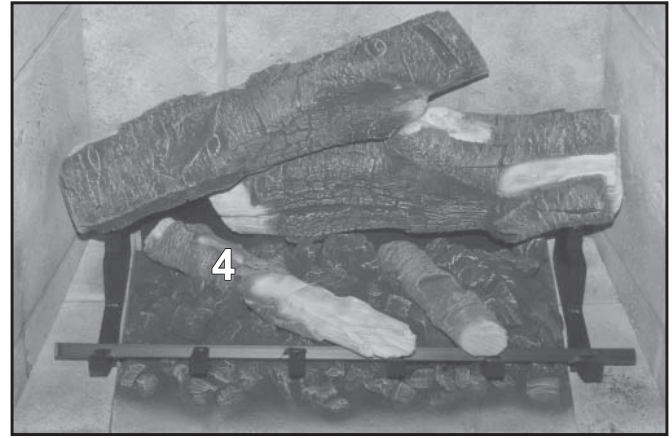

**Figure 26: Log 4 in Place.**

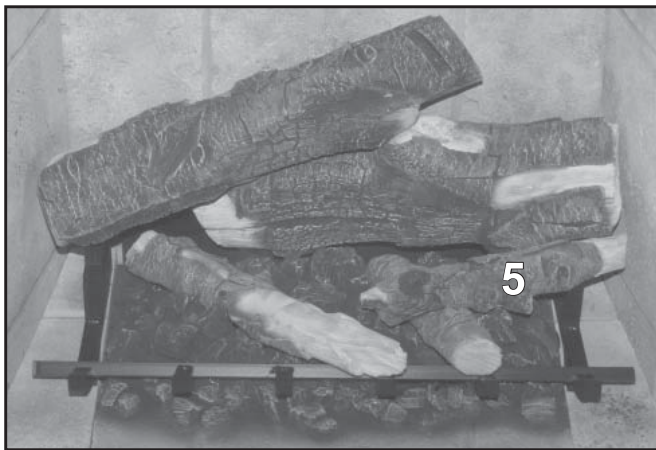


**Figure 27: Log 5 in Place.**

2. Install Left Rear log with the right side on the grate, using a groove on the bottom of the log to index itself to the grate (see Figure 24). The right side self locates on the first log. Alignment notches are provided for locating the centre area (see C in Figure 24). Align the front edge of the log with the upright section of the log grate (see D in Figure 24).
3. Insert Log 3 into the groove on the burner top. The groove has a stop at the rear to position the log properly from front to back. Refer to Figure 25.
4. Log 4 sits in a groove molded into the top of the burner top. See the details in Figure 26 showing the indexing key on this log.

5. Install Log 5 with the right side resting on the grate and the right side right up against the right hand firebox liner. The left side sits on a flat section in Log 3. Refer to Figure 27.



**Figure 28: Log 6 in Place.**

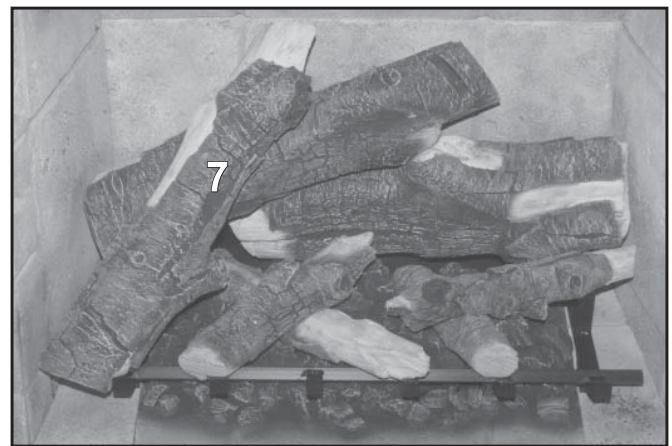


**Figure 29: Log 7 in Place.**

6. Install Log 6 by resting it across the flat section of Log 5 and locating the front edge across the grate finger as shown in Figure 28.
7. Log 7 sits in between the left panel and the left grate finger and cross the bar of the grate (see Figure 29). There is a notch across Log 2, which this log will locate into. The edge along the back of this log will index into the notch of Log 2.

# INSTALLATION SET-UP



**Figure 30: Log 8 in Place.**

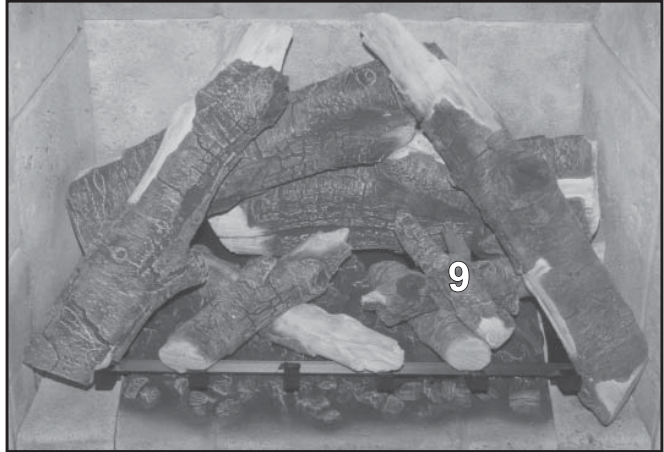

**Figure 31: Log 9 in Place.**




**Figure 32: Accent Twig in Place.**


8. Situate Log 8 between the right grate finger, the right firebox liner and the grate cross bar (see Figure 30). On the back of the log near the top end is a ceramic pin, this pin sits into a groove on the top of Log 2.
9. Sit the Y shaped Log 9 across Log 4 and 5 as shown in Figure 31.
10. The final little Accent Twig sits on the front ceramic burner accent and the grate finger as shown in Figure 32.

**NOTE:** Variances in gas quality or log placement may cause some discoloration of the log set to occur.

## GLASS BURNER INSTALLATION:

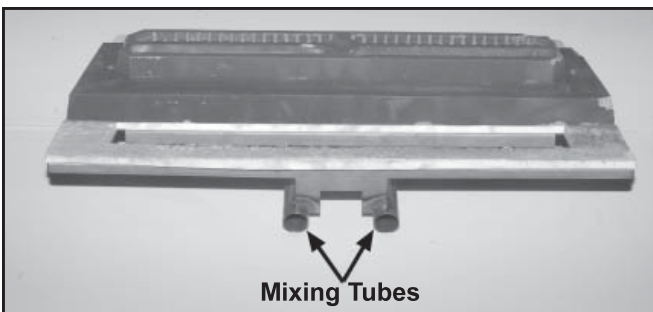

**Figure 33: Mixing Tubes in Glass Burner.**

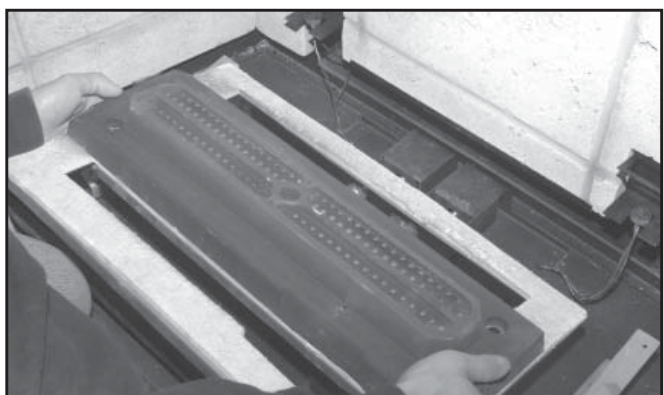

**Figure 34: Placing Glass Burner.**


1. In the bottom rear of the firebox there are two (2) gas orifices in a housing that facilitate the air shutter mechanisms and the Burner Mounting Brackets are above them (See Figure 16). There are two (2) mixing tubes underneath the back of the burner (see Figure 33). Lift the burner into the firebox with the back of the burner tilted downward. Keep the burner high enough at the front to clear the pilot assembly. Line up the mixing tubes with the holes in the burner mounting brackets and slowly lower the front of the burner over the pilot assembly (see Figure 34).

# INSTALLATION SET-UP


2. Pull the burner forward up to the angular brackets near the front of the firebox (see Figure 35). The burner rests on the floor of the firebox and is properly aligned against the two (2) front burner rests.

**IMPORTANT:** If the burner is not far enough back to lower the burner behind these brackets, then the mixing tubes are not engaged in the air shutter. Failing to ensure the mixing tubes are located in the mixing tube support brackets may cause serious performance and or safety issues.


3. Place the glass tray over top of the burner top as shown in Figure 36. It simply rests over the top section of the burner.
4. In front of the pilot assembly, on the front edge of the burner is one burner port which helps in the lighting of the main burner (see Figure 35). The glass tray has one hole in the same position that allows the gas to flow to this location. Ensure the glass tray hole is properly positioned over the port in the burner.
5. The DV48 glass burner option is supplied with two (2) quantities of glass, black and white. There is enough of either to fill the burner, so you can decide whether to install all white, all black, or some type of mixture (example in Figure 37). Fill the glass burner tray to the top. Try to keep glass from falling in around the pilot assembly.

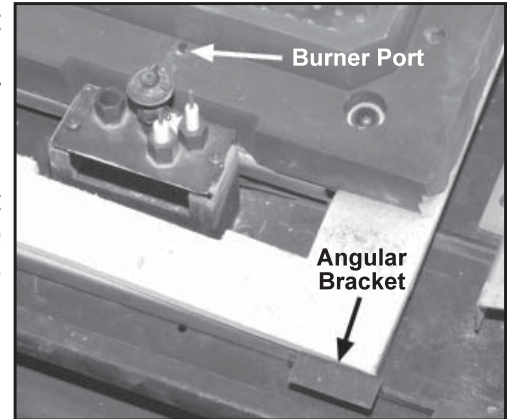

**Figure 35: Glass Burner in Place.**

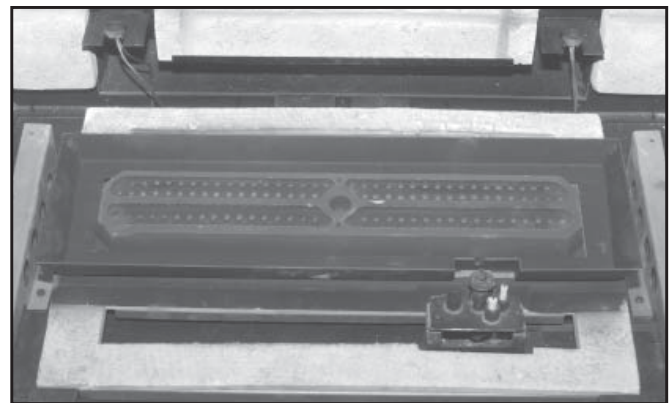

**Figure 36: Glass Tray over Burner.**

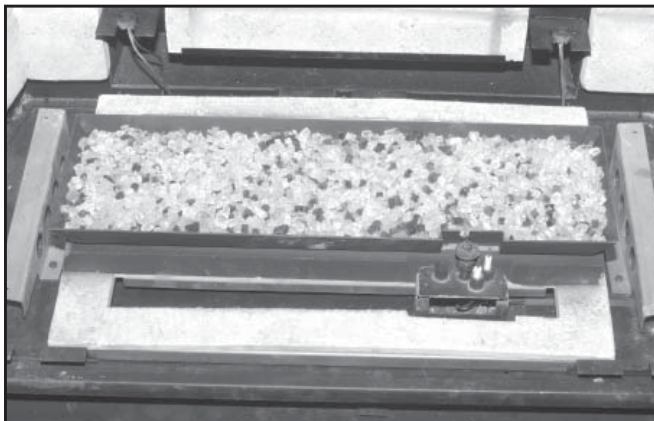


**Figure 37: Glass Tray with Mixed Glass.**



**Figure 38: Burner Trim Being Placed.**



**Figure 39: Burner Trim in Correct Position.**

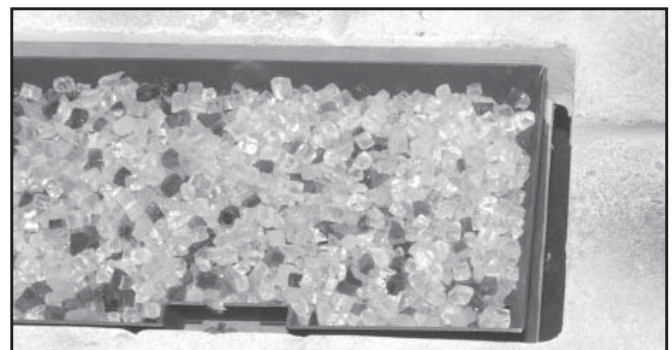


**Figure 40: Proper Gap Between The Glass Tray And The Burner Trim.**

# INSTALLATION SET-UP

6. Gently place the burner trim piece around the burner (see Figure 38). It sits on various support brackets and fits around the burner tray and up against the firebox liner. Figure 39 shows the burner trim in the correct position. Ensure a minimum  $\frac{3}{8}$ " (8mm) gap is maintained around the burner glass tray (see Figure 43).
7. If the optional rock accent kit was purchased for the DV48, you can place the rocks in a random pattern around the glass tray. A few can straddle the  $\frac{3}{8}$ " (8mm) gap around the glass tray. Try to keep them looking randomly placed. Keep from placing them in large piles as they need to be evenly distributed. Examples are shown in Figure 41 & 42.


It is important that rock accents are not placed in front or over the pilot assembly. This may prevent the burner from lighting in a timely fashion or overheat the pilot assembly. Keep an area of about 3" (75mm) in front of the pilot light free from obstruction and rock accents (see Figure 41).

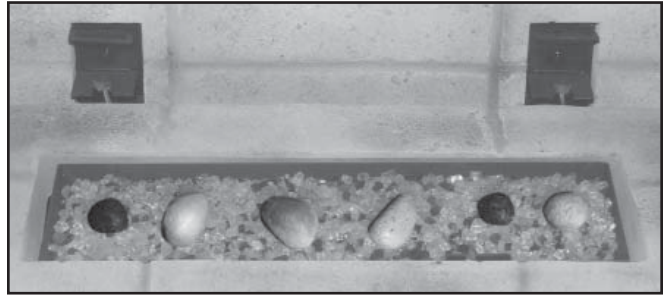

**Figure 41: Example of Rock Placement - Single Kit.**




**Figure 42: Example of Rock Placement - Multiple Kits.**

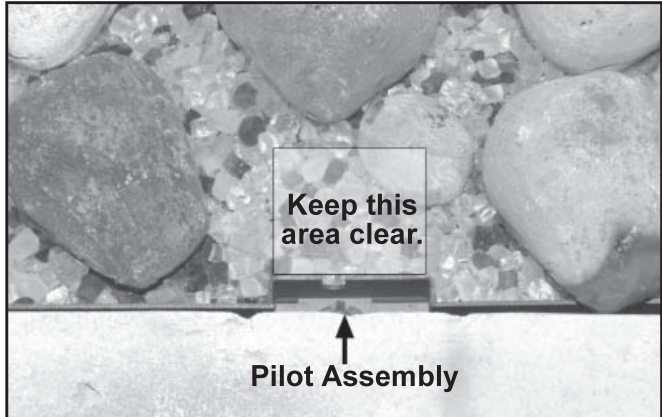


**Figure 43: Keep Area in Front of Pilot Assembly Clear.**

## PORCELAIN PANEL KIT INSTALLATION:

1. Install the porcelain Light Covers over the Light Cover Base. The tabs on the back of the Light Cover slide down behind the Light Cover Base. Refer to Figures 44 & 45.
2. Ensure the Rear Brick Panel Support is in the lower position. The support is located at the back of the firebox (see Figure 9). Remove the Support, if necessary, and move it to the appropriate placement.
3. Install the Rear Firebox Liner. This panel rests on top of the accent lights and Rear Brick Panel Support. It will stay in this location as you install the remaining panels. Refer to Figure 46.

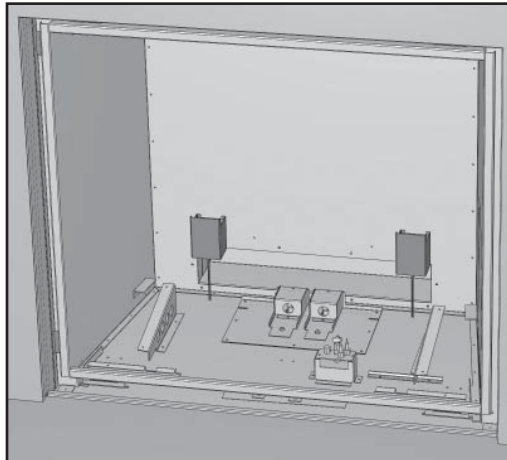


**Figure 44: Porcelain Light Covers in Place.**

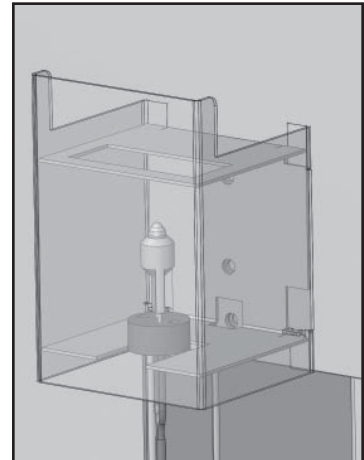


**Figure 45: Porcelain Light Covers Close-up.**

# INSTALLATION SET-UP

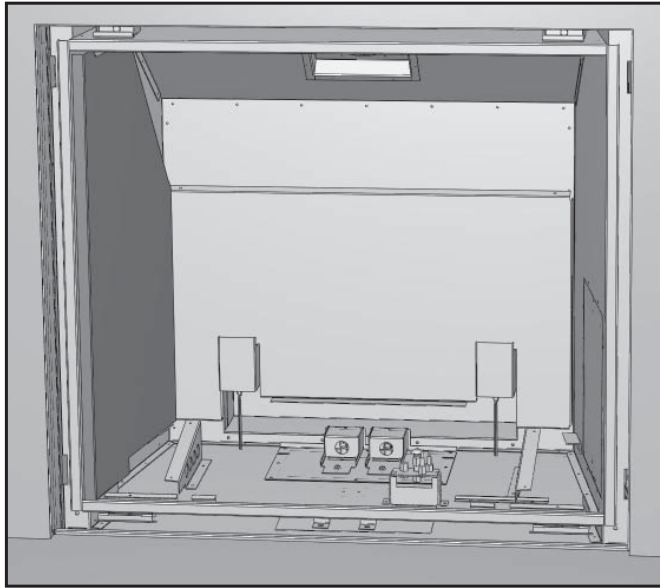


**Figure 46: Rear & Left Porcelain Panels in Place.**

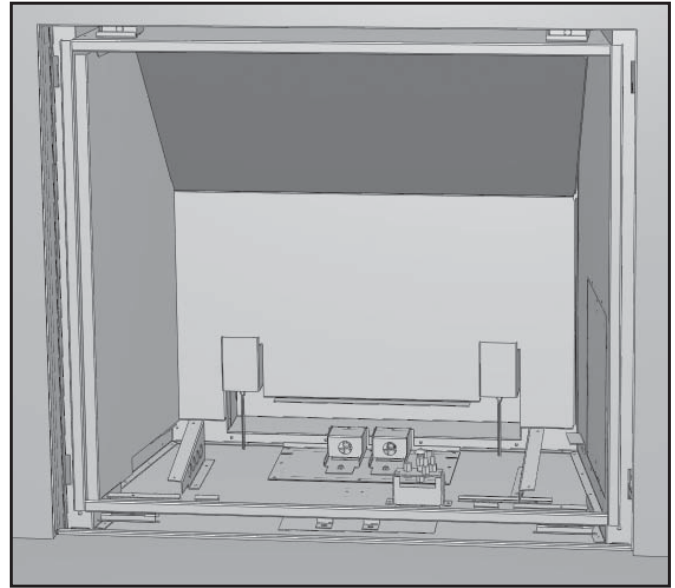


**Figure 47: Top Porcelain Panel in Place.**


4. Install the Left Firebox Liner Panel; it sits on the bottom front edge of the firebox (see Figure 46), a support bracket at the lower rear of the firebox, and is held in by a retainer at the top of the firebox. Adjust the panel retainers as required.
5. Install the Top Panel by placing it on top of the Rear Panel and behind the Left Panel (see Figure 47). Hold it with one hand or have someone else hold it for you while you place the last panel. **WARNING:** If this panel falls from this location it will possibly break or the paint work will become chipped.

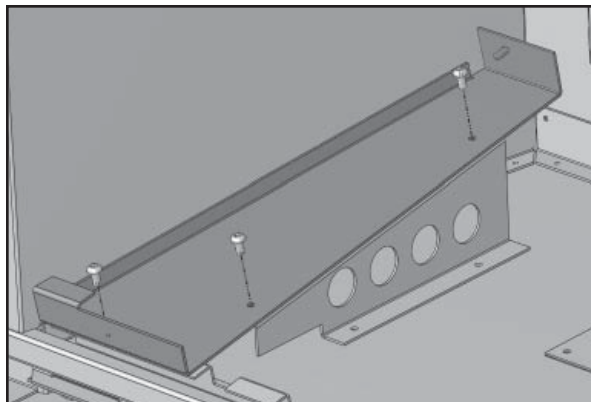

**Figure 48: Installing Left Burner Cover Support.**

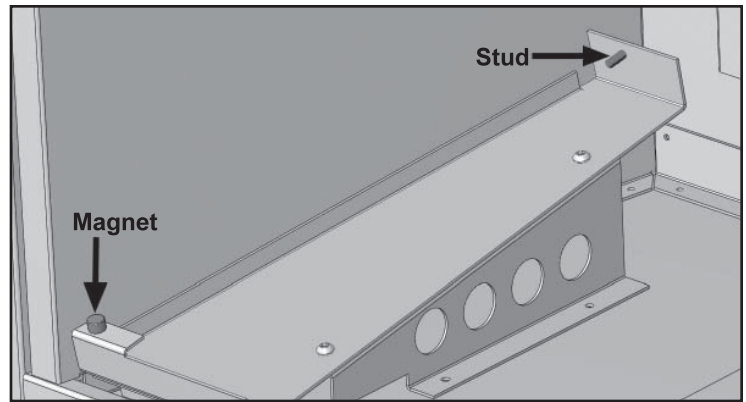

**Figure 49: Permanent Magnet on Left Burner Cover Support.**

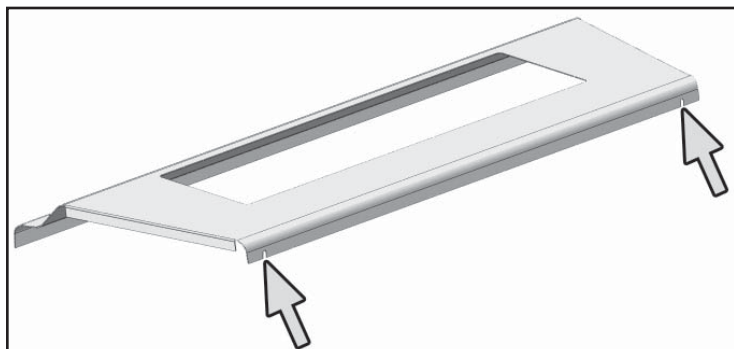


**Figure 50: Slots in Back of Burner Cover.**

6. Place the Right Firebox Liner Panel in the same manner used for the Left Panel. The vertical edges of the left and right panels should line up with the front edges of the firebox sides. The side panels rest up against the back panel and hold the top panel in position.
7. Install the Left Burner Cover Support as shown in Figure 50. This bracket is installed using three (3) T-20 Torx screws supplied. Install the Right Burner Cover Support Right as you've done on the left side.

# INSTALLATION SET-UP

8. Place one of the Permanent Magnets provided on the front edge of the Burner Cover Supports as shown in Figure 49.
9. Install the Burner Assembly; refer to Step 1 & 2 of GLASS BURNER INSTALLATION.
10. Place the Ceramic Burner Front on top of the Burner Cover Supports as shown in Figure 49. This part should be pulled forward until it contacts the metal brackets in the front.

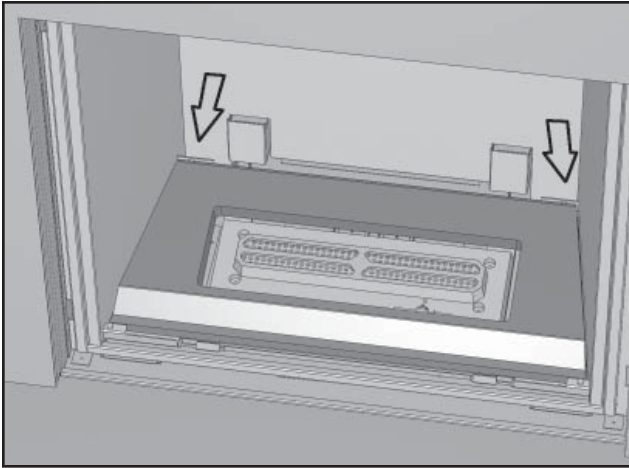

**Figure 51 Installing Burner Cover.**


11. The Burner Cover has two (2) slots, one on either side of the rear flange (refer to Figure 50). These slots fit over the two (2) studs in the firebox (refer to Figure 49) to keep it in place.

The arrows in Figure 51 point at the studs that hold the Burner Cover in position. Place the Burner Cover over the pins and then once aligned with the holes, push the Burner Cover back towards the rear of the firebox. The front of the Burner Cover is held in place by the permanent magnets installed in step 8.


12. Install the Glass Tray and the Glass to complete the installation of the Porcelain Panel Kit, refer to Step 3, 4, 5, & 7 of GLASS BURNER INSTALLATION.

## OPTIONAL FRONT INSTALLATION:

There are many different styles of optional fronts available for your fireplace. These fireplace fronts hang onto the front of your fireplace using four (4) hooks, one on each corner (refer to Figure 104). These hooks secure the front to the fireplace, providing for easy removal for service access to the fireplace and also to position the front the proper distance away from the glass door and the fireplace facing.

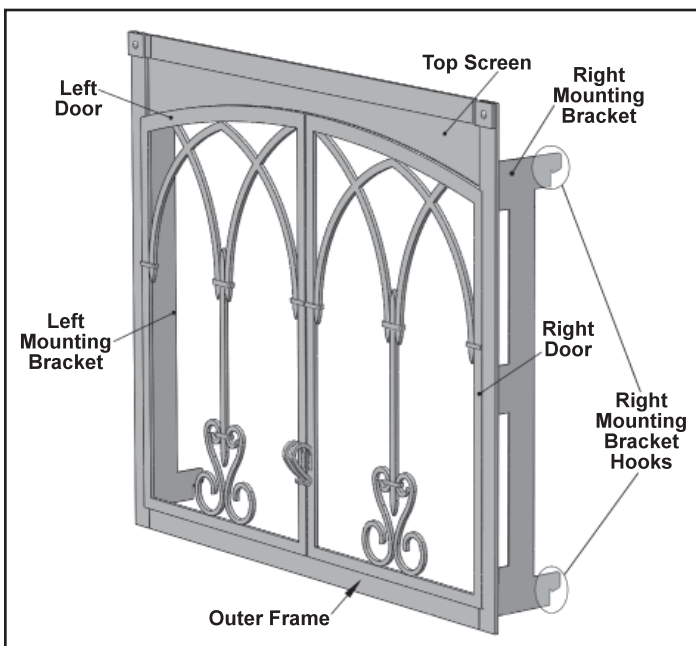

**Figure 52: Optional Front Parts.**

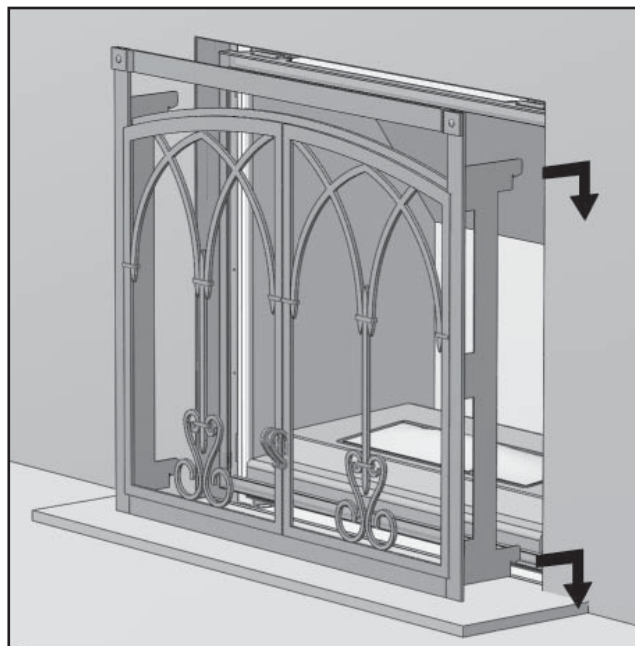


**Figure 53: Optional Front Being Installed.**

# INSTALLATION SET-UP

Install the front by lifting it parallel to the fireplace with the mounting bracket hooks pointing towards the fireplace. Slide the hooks all the way into the slots between the Glass Door Frame and the drywall flanges of the fireplace. Pull down on each corner to make sure the hook is engaged with the hanger. Refer to Figures 53 & 54.

**IMPORTANT:** Ensure that the minimum gap required between the Optional Front and wall of the unit is maintained (refer to Figure 54). Not maintaining the proper gap will cause the unit to run at elevated temperatures and result in an unsafe condition

The face should be cleaned before the fireplace is turned on for the first time.

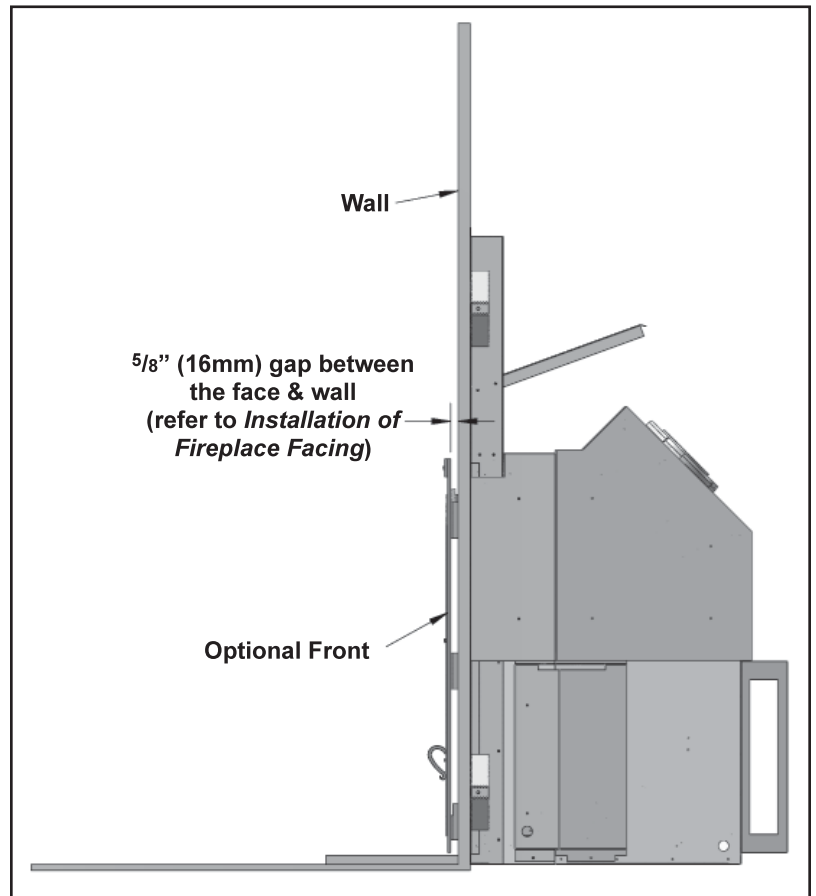

**Figure 54: Optional Front Installed.**

# START-UP & OPERATION

## NORMAL SOUNDS DURING OPERATION:

Table 1: Normal Sounds

Component	Sound & Reason
DV48 & Fascia	Creaking when heating up or cooling down.
Burner	Light pop or poof when turned off; this is more common with LP units.
Pilot Flame	Quiet whisper while the pilot flame is on.
Gas Control Valve	Dull click when turning on or off, this is the valve opening and closing.

## REMOTE CONTROL OPERATIONS:

The Proflame GTMF is a modular remote control system that directs the functions of the DV48. The Proflame GTMF is configured to control the on/off main burner operation, its flame levels and provides on/off and Smart thermostatic control of the appliance. The system controls a remotely actuated 120V/60Hz power outlet, fan speed through six (6) levels and has a constantly powered 120V/60Hz power outlet.

### WARNING

**THE TRANSMITTER AND RECEIVER ARE RADIO FREQUENCY DEVICES. PLACING THE RECEIVER IN OR NEAR METAL MAY SEVERELY REDUCE THE SIGNAL RANGE.**

### ATTENTION!

- **TURN "OFF" THE MAIN GAS SUPPLY OF THE APPLIANCE DURING INSTALLATION OR MAINTENANCE OF THE RECEIVER.**
- **PLACE THE RECEIVER'S 3 POSITION SLIDER SWITCH IN THE "OFF" POSITION DURING INSTALLATION OR MAINTENANCE.**
- **TURN "OFF" MAIN GAS SUPPLY TO THE APPLIANCE PRIOR TO REMOVING OR REINSERTING THE BATTERIES IN THE RECEIVER.**
- **DURING APPLIANCE INSTALLATION/MAINTENANCE OR IN CASE OF REMOTE CONTROL MALFUNCTION TURN OFF THE FAN CONTROL MODULE USING THE "ON/OFF" MAIN POWER SWITCH ON THE FRONT PANEL OF THE FCM.**

## TECHNICAL DATA

Transmitter (Remote Control):

Supply voltage 4.5 V (three 1.5 V AAA batteries)

Ambient temperature ratings 0 - 50 °C (32 - 122 °F)

Receiver:

Supply voltage 6.0 V (four 1.5 V AA batteries)

Fan Control Module:

Supply voltage/frequency: 120 V / 60 Hz

Aux switched output: 120 V / 60 Hz / 2 A

Fan speed output: 120 V / 60 Hz / 1 A

## SYSTEM DESCRIPTION:

The Proflame Remote Control System consists of three (3) elements:

1. Proflame Transmitter.
2. Proflame Receiver and a wiring harness to connect the Receiver to the gas valve, stepper motor and Fan Control Module.
3. Proflame Fan Control Module (FCM)

# START-UP & OPERATION

## TRANSMITTER (Remote Control with LCD Display)

The Proflame Transmitter uses a streamline design with a simple button layout and informative LCD display (Figure 55). The Transmitter is powered by three (3) AAA type batteries. A Mode Key is provided to Index between the features and a Thermostat Key is used to turn on/off or index through Thermostat functions (Figure 55 & 56).

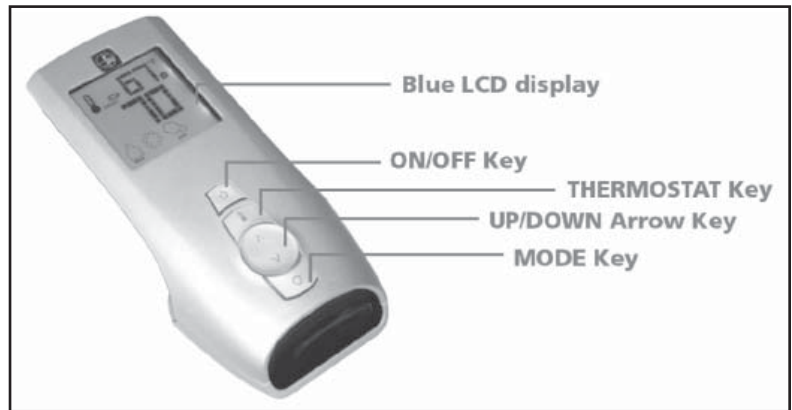


Figure 55: Proflame Transmitter.

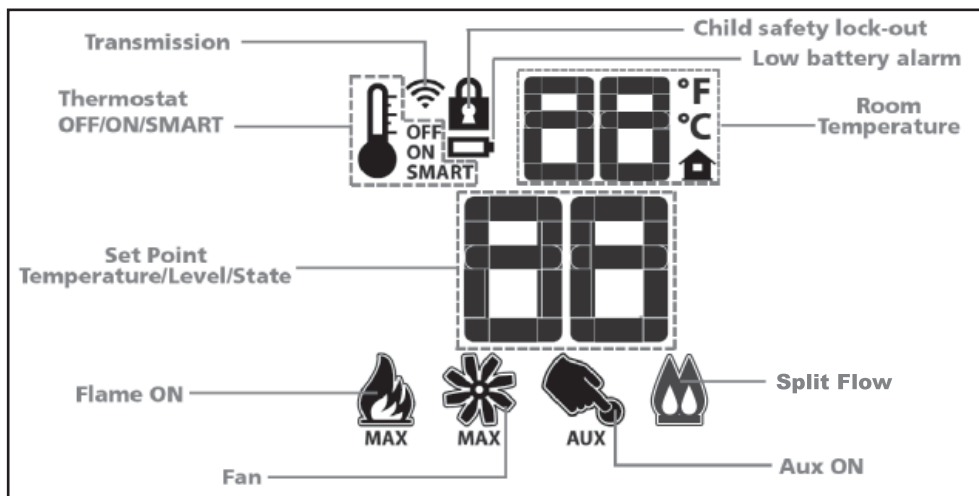


Figure 56: Proflame Transmitter LCD Screen.

## RECEIVER

The Proflame Receiver (Figure 57) connects directly to the gas valve, stepper motor, DFC, and Fan Control Module with a wiring harness. The Receiver is powered by four (4) AA type batteries. The Receiver accepts commands via radio frequency from the Transmitter to operate the appliance in accordance with the particular Proflame system configuration. The Receiver three (3) position slider switch can be set to one of three positions: ON (Manual Override), Remote (Remote control), or Off.

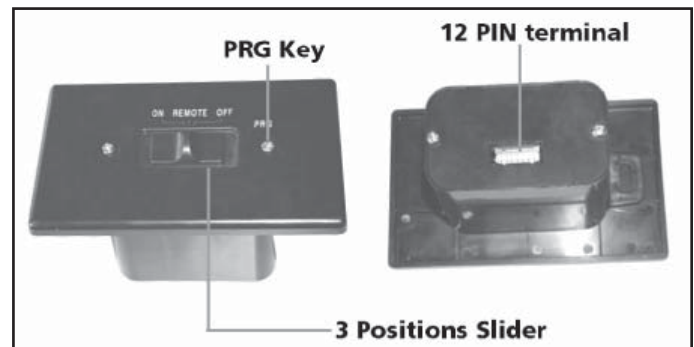


Figure 57: Proflame Receiver.

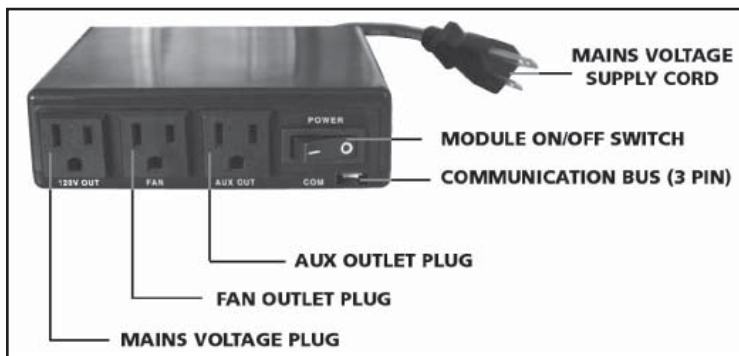


Figure 58: Proflame Fan Control Module.


## FAN CONTROL MODULE

Fan Control Module (FCM) offers the added ability to control the fan speed through six (6) speeds, a remotely actuated 120V outlet and a constantly powered 120V outlet. The FCM provides DC power to the Receiver allowing the batteries to be used only when line power is interrupted or lost (see Figure 58).

# START-UP & OPERATION

## WALL MOUNTING THE RECEIVER:

The receiver can be placed inside a standard Junction type wall box either by itself or in combination with a light dimmer control. This installation can take place up to 8'ft (2.4m) from the appliance control valve.

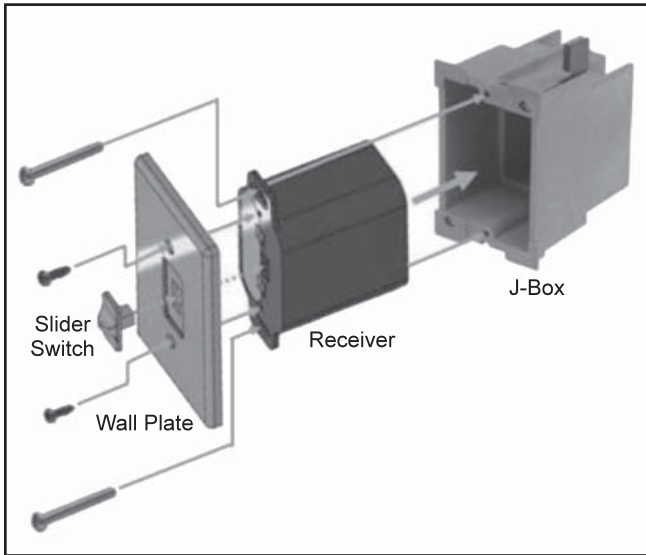

**Figure 59: Wall Mounting the Receiver.**

1. Connect the wiring harness to the back of the Receiver.
2. Install the Receiver in the Junction box using the existing J box screws (Figure 59).
3. Insert the four (4) AA type batteries in the battery compartment with the correct polarity.
4. Place the slider into the cover plate.
5. Put the Receiver switch in the "OFF" position.
6. Make sure the Receiver and cover plate words "ON" and "UP" are on the same side.
7. Align the slider with the switch on the Receiver and couple the switch into the slider.
8. Align the screw holes.
9. Using the two (2) screws provided secure the cover plate to the Receiver.

## OPERATING PROCEDURE:


### Initializing The System For The First Time

Install the four (4) AA batteries into the receiver battery bay. Note the polarity of the battery and insert into the battery bay as indicated on the Battery cover (+/-). Place the 3-position slider switch in the "Remote" position (see Figure 57). Using the end of a paper clip, or other similar object, insert the end of the paper clip into the hole marked "PRG" on the Receiver front cover (see Figure 57).

The Receiver will "beep" three (3) times to indicate that it is ready to synchronize with a Transmitter. Install the three (3) AAA type batteries in the Transmitter battery bay, located on the base of the Transmitter. With the batteries already installed in the Transmitter, push the 'ON' button. The Receiver will "beep" four (4) times to indicate the Transmitter's command is accepted and sets to the particular code of that Transmitter. The system is now initialized.

### Temperature Indication Display

With the system in the "OFF" position, press the Thermostat Key and the Mode Key at the same time. Look at the LCD screen on the transmitter to verify that a °C or °F is visible to the right of the Room Temperature display (see Figure 60).

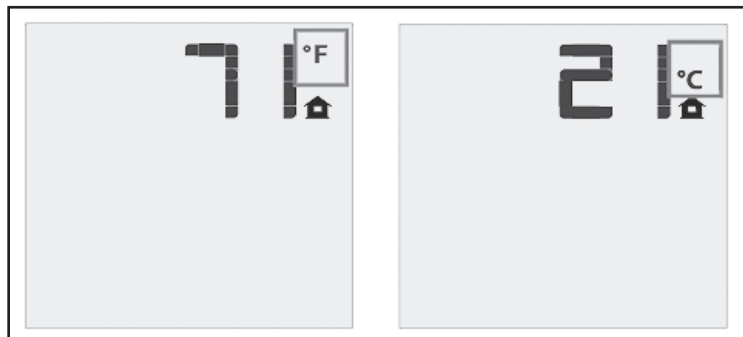

**Figure 60: Remote Control Display in Fahrenheit and Celsius.**

### Turn on the Appliance

Press the ON/OFF Key on the Transmitter. The Transmitter display will show all active Icons on the screen. A single "beep" from the Receiver will confirm reception of the command and will commence to first ignite the pilot light, followed by the main burner. This should take about 10 seconds to complete.

# START-UP & OPERATION

## Turn off the Appliance

Press the ON/OFF Key on the Transmitter. The Transmitter LCD display will only show the room temperature and Icon (see Figure 61). A single “beep” from the Receiver confirms reception of the command and both the pilot light (if the unit is not set to continuous pilot) and main burner will turn off.

## Room Thermostat (Transmitter Operation)

The Remote Control can operate as a room thermostat. The thermostat can be set to a desired temperature to control the comfort level in a room. To activate this function, press the Thermostat Key (see Figure 55). The LCD display on the Transmitter will change to show that the room thermostat is “ON” and the set temperature is now displayed (see Figure 61). To adjust the set temperature, press the Up or Down Arrow Keys until the desired set temperature is displayed on the LCD screen of the Transmitter.

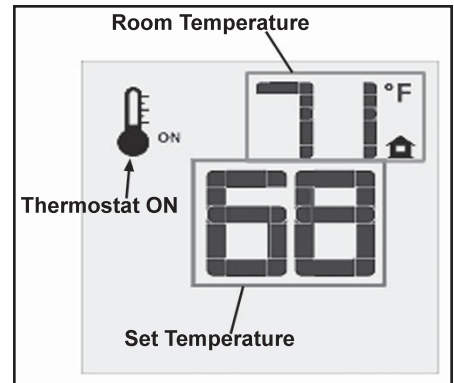


Figure 61: Remote Control Displays Set Temperature.

## Smart Thermostat (Transmitter Operation)

The Smart Thermostat function adjusts the flame height in accordance to the difference between the set point temperature and the actual room temperatures. As the room temperature gets closer to the set point the Smart Function will modulate the flame down. To activate this function, press the Thermostat Key (Figure 56) until the word “SMART” appears to the right of the temperature bulb graphic (Figure 62). To adjust the set temperature, press the Up or Down Arrow Keys until the desired set temperature is displayed on the LCD screen of the Transmitter.

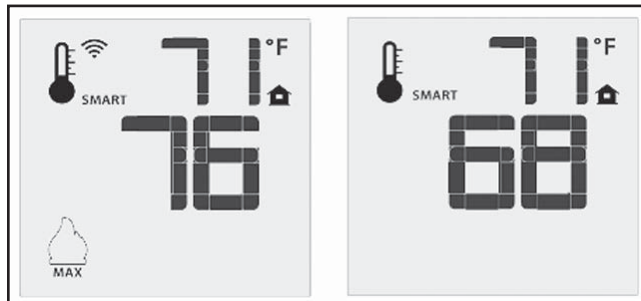


Figure 62: Remote Control's Smart Flame Function.

## Remote Flame Control

The Proflame GTMF has six (6) flame levels. With the system on, and the flame level at the maximum in the appliance, pressing the Down Arrow Key once will reduce the flame height by one step until the flame is turned off. The Up Arrow Key will increase the flame height each time it is pressed. If the Up Arrow Key is pressed while the system is on but the flame is off, the flame will come on in the high position (refer to Figure 63). A single “beep” will confirm reception of the command.

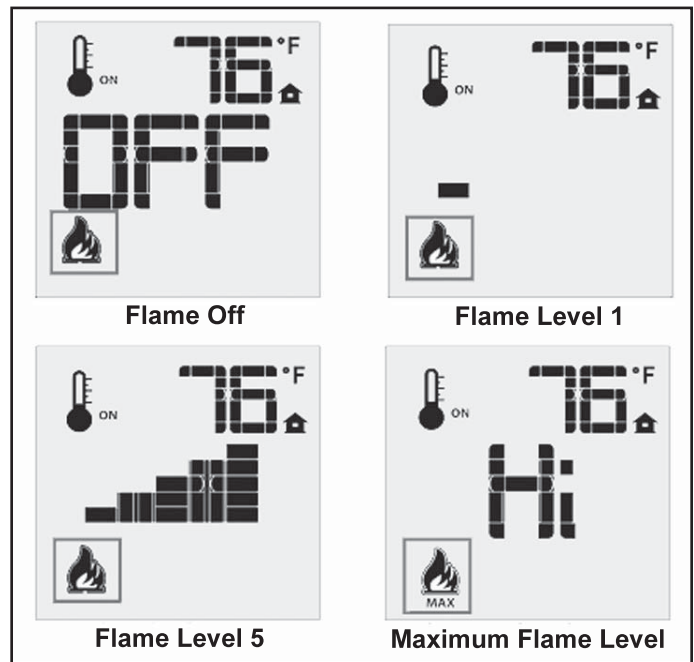


Figure 63: Remote Control's Flame Levels.

## Remote Actuated Accent Lights

The DV48 is shipped with two (2) firebox accent lights. They are connected to the auxiliary power outlet of the Proflame Fan Control Module. The lights can be turned on or off using the Auxiliary function on your remote control. Press the Mode Key on the remote control until the Auxiliary Function icon is highlighted. Pressing the Up or Down arrow keys will turn the accent lights on or off. See Figure 64 for the AUX icon details. A single “beep” will confirm the reception of the command.

# START-UP & OPERATION

## Key lock

This function will lock the keys to avoid unsupervised operation. To activate this function, press the MODE and UP keys at the same time and the a lock will appear (see Figure 65). To de-activate this function, press the MODE and UP Keys at the same time.

## Low Battery Power Detection

**Transmitter:** The life span of the remote control batteries depends on various factors: quality of the batteries used, the number of ignitions of the appliance, the number of changes to the room thermostat set point, etc. When the Transmitter batteries are low, a Battery Icon will appear on the LCD display of the Transmitter (see Figure 66) before all battery power is lost. When the batteries are replaced this Icon will disappear.

**Receiver:** The life span of the Receiver batteries depends on various factors: quality of the batteries used, the number of ignitions of the appliance, the number of changes to the room thermostat set point, etc. When the Receiver batteries are low, No “beep” will be emitted from the Receiver when it receives an On/Off command from the Transmitter. This is an alert for a low battery condition for the Receiver. When the batteries are replaced the “beep” will be emitted from the Receiver when the ON/OFF Key is pressed (See *Initializing The System For The First Time*).

## Manual Bypass Of The Remote System

If the batteries of the Receiver or Transmitter are low or depleted, the appliance can be turned on manually by sliding the three position slider switch on the Receiver to the ON position. This will bypass the remote control feature of the system and the appliance main burner will come on.

## Split Valve Operation

The split flow operation on the DV48 turns off the rear section of the burner, greatly reducing the heat output of the unit. If you'd like to have the fireplace on but would not like to have as much heat in the room, you can turn off this function. Press the bottom key of your remote repeatedly until the double flame icon is lit up (refer to Figure 67). By pressing the up or down key, turn the rear split valve to “on” or “off”. The rear flame on the burner will turn on and off. This does not affect the flame setting of the remaining flame. Turning off the rear section of this burner may result in an extinguishing “pop”, particularly if your fireplace is operating on propane gas

**WARNING: Fire Hazard. Can cause severe injury or death** The Receiver causes ignition of the appliance. The appliance can turn on suddenly. Keep away from the appliance burner when operating the remote system or activating manual by pass of the remote system.

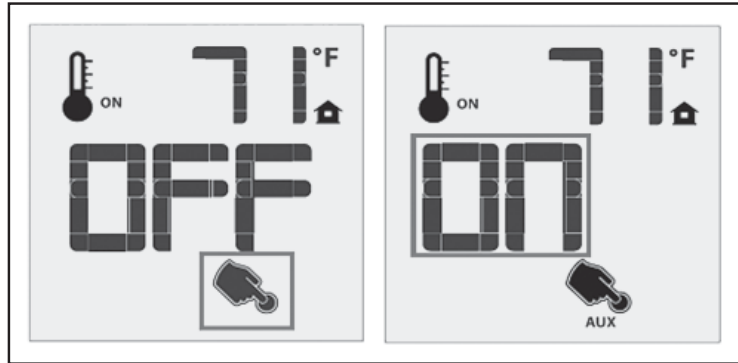


Figure 64: Remote Control with Aux for Accent Lights.

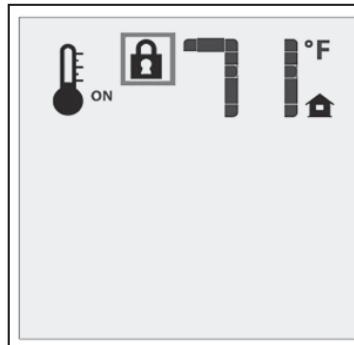


Figure 65: Remote Control Locked.



Figure 66: Low Battery Indicator.

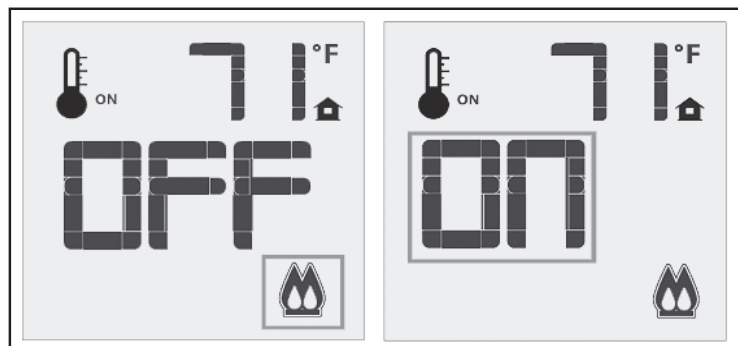


Figure 67: Split Valve Indicator.

# START-UP & OPERATION

**WARNING: Shock Hazard.** Can cause severe injury or death. This device is powered by line voltage. Do not try to repair this device. In no way is the enclosure to be tampered with or opened. Disconnect from line voltage before performing any maintenance.

**WARNING: Devices rated more than 5A shall not be connected to the OUT receptacle. Devices rated more than 1A shall not be connected to the FAN receptacle. Devices rated more than 2A shall not be connected to the AUX receptacle.**

**CAUTION: Property Damage Hazard.** Excessive heat can cause property damage. The appliance can stay lit for many hours. Turn off the appliance if it is not going to be attended for any length of time. Always place the Transmitter where children cannot reach it.

## AIR SHUTTER ADJUSTMENT:


The DV48 is setup to work with two (2) gas orifices. The orifice on the left (looking from the front) feeds the front burner while the right feeds the rear burner, which can also be switched off using the remote control.

Each orifice has its own Air Shutter. The Air Shutter is

connected to an Adjustment Lever that is accessible from the front and bottom of the firebox. These Air Shutters can be adjusted during the operation of the fireplace.

This Figure 68 shows the fireplace with the door and the burners removed. This is to better show the Air Shutters and the Adjustment Levers. The Door/Air Shutter Tool (see Figure 4) has a small hook on one end. This hook can be used by placing it into the hole at the end of each Adjustment Lever and moving the Adjustment Lever forward or rearward. Moving the Lever towards you opens the Air Shutter, while moving it rearward, closes the Air Shutter.

Air shutters should be adjusted so that the gas flame burns with a blue base and a bright yellow upper section. Air shutters set to closed will lead to a dirty flame which may lead to soot gathering on the logs and/or glass panel. Properly set Air Shutters will result in a very blue flame for the first fifteen (15) minutes of operations with the flame becoming more yellow as the unit comes up to operating temperature.

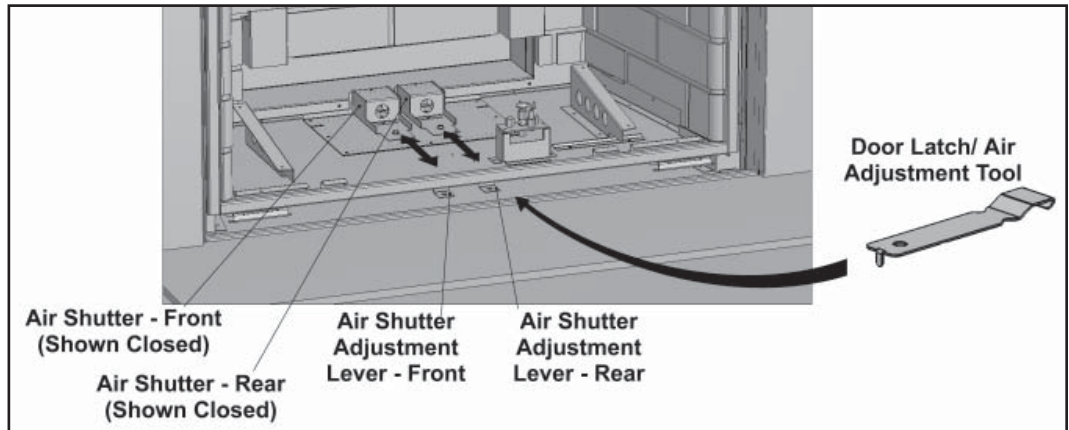

**Figure 68: Air Shutter Adjustment.**

**Table 2: Air Shutter Settings.**

		Left	Right
Glass / Media Burner	LP	Open	Open
	NG	Open	Open
Log Set/ Ember Bed Burner	LP	Open	1/8" (3mm) Open
	NG	Open	1/16" (2mm) Open

# START-UP & OPERATION

---

## CHECK FOR PROPER BURNER FLAME

---

Once your new DV48 has run through the “first fire”, (see section on first firing) check for proper flame appearance. A gas appliance’s performance is dependent on several factors. Vent configuration, fuel type, altitude and restrictor setting are all factors in how the final flame appears in the firebox. The fireplace must be operated for a minimum of 30 minutes or the flame will not normalize. Once this is done, the flame should look similar to Figures 69 & 70. The flame should be lit at all ports, and be burning directly from the burner surface. The base should show some blue with a bright yellow appearance above. The flame should be lively without being disturbed by excessive air turbulence. If your flame does not resemble these images below, ask your service technician to review this installation to determine what adjustments may be required.



**Figure 69: Proper Burner Flame for Ember Bed/ Log Burner.**



**Figure 70: Proper Burner Flame for Glass / Media Burner.**

# SERVICE/MAINTENANCE

## LIGHTING INSTRUCTION LABEL:

**CAUTION:** Hot while operating. Do not touch. Severe burns may result. Keep children, clothing, furniture, gasoline or other flammable vapors away.

**CAUTION:** Do not operate this fireplace with the glass removed, cracked or broken. Replacement of the panel(s) should be done by a licensed or qualified person! This appliance needs fresh air for safe operation and must be installed with provisions for combustion and ventilation air. See installation and operating instructions manual. Keep burner and control compartment clean.

**WARNING:** Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage, or loss of life. Refer to owner's manual provided with this appliance. See installation and operating instructions accompanying appliance. Installation and service must be performed by a qualified installer, service agency, or the gas supplier.


### FOR YOUR SAFETY READ BEFORE OPERATING

**WARNING:** IF YOU DO NOT FOLLOW THESE INSTRUCTIONS EXACTLY, A FIRE OR EXPLOSION MAY RESULT CAUSING PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OF LIFE.

- A) This appliance is equipped with an ignition device which automatically lights the pilot. Do not try to light the pilot by hand.
- B) BEFORE LIGHTING smell all around the appliance area for gas and next to the floor because some gas is heavier than air and will settle on the floor.
- WHAT TO DO IF YOU SMELL GAS:  
Do not try to light any appliance. Do not touch any electrical switch: do not use any phone in your building. Immediately call your gas supplier from a neighbors' phone. Follow the gas suppliers instructions. If you cannot reach your gas supplier, call the fire department.
- C) If any portion of this appliance does not operate as the instructions indicate, don't try to repair it, call a qualified service technician. Do not use tools. Force or attempted repair may result in a fire or explosion.
- D) Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

### OPERATING INSTRUCTIONS

1. STOP! Read the safety information above on this label.
2. Read the owner's manual including the section on "Remote Control" operation.
3. Do not attempt to light the pilot by hand.
4. If you smell gas, STOP! Follow "B" in the safety information above on this label. If you don't smell gas, go to the next step.
5. Using the remote control, set thermostat to desired setting, or switch press the ON/OFF key on the remote. "ON" will be indicated on the display of the remote and an audible "beep" will be heard at the unit to indicate the command has been received.
6. This appliance is equipped with a completely automatic ignition and lighting control. The control will attempt to light the pilot several times if necessary. If it is unsuccessful, it will discontinue operations. If the appliance does not operate, follow the instructions "To Turn Off Gas To Appliance" and call your service technician or gas supplier.

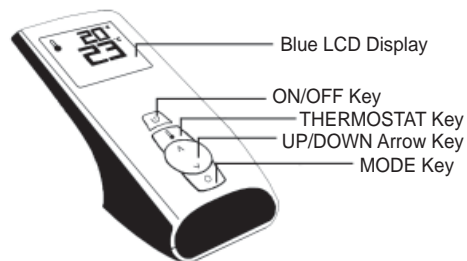

### TO TURN OFF GAS TO APPLIANCE

1. Set thermostat to lowest setting, or press the ON/OFF Key. "OFF" will be indicated on the display and an audible "Beep" will be heard at the unit to indicate the command has been received.

C-11800

**Figure 71. Lighting Label.**

## AIR INTAKE:

If for any reason, during the life of this appliance, any portion of the fresh air intake system including the vent termination, vent components or any portion of the air intake that transfers fresh combustion air from the starter collar on the top of the unit to the air intake at the bottom rear of the firebox is disassembled, it must be re-assembled as instructed in the installation portion of the manual. All air intake components must be re-sealed using high temperature sealant or ceramic gaskets as provided by the manufacturer or as shown in the vent installation area of the manual. This process should be completed by a qualified hearth installation technician. Periodic examination of venting systems should be done by a qualified agency.


# SERVICE/MAINTENANCE

## LIGHT BULB REPLACEMENT

The DV48 comes with 2 accent lights in the rear of the fireplace. These are halogen lights that will need replacing from time to time, depending on use. They can be purchased from most hardware stores or specialty lighting stores. The bulb specifications are:

### Halogen bulb 120V 50W GY6.36 (lower wattages may be used)

Before replacing the light bulbs, let the unit cool completely to room temperature. In order to replace this bulb, you need to remove the fireplace door, logs, burners and firebox liners. See each specific section in this manual for instructions on how to remove these components. The light is situated in a light cover that is located on the back wall of the firebox. To remove the light cover, lift the cover about ½" and pull towards you. Lift the old bulb from the socket and replace it with the new bulb. It's best not to contact the bulb with your hands. Oils from your skin will diminish the bulbs life. Use paper or the wrapper that the bulb comes in to keep from touching the bulb. If you prefer, the bulb can be replaced with a lower wattage if you'd like to reduce the bulbs effects in the firebox. Re-assemble the various components in the reverse order.

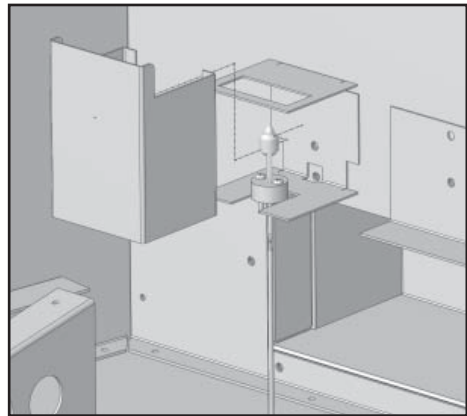

**Figure 72. Replacing Light Bulb.**

**Ensure the light covers are replaced prior to perating the appliance.**

## CLEANING / ANNUAL SERVICE:

The DV48 will require maintenance, which can usually be planned on an annual basis. Service should include cleaning, battery replacement, light replacement, venting inspection and inspection of the burner, log sets and firebox liners. The venting systems should be periodically examined by a qualified agency.

## CLEANING THE GLASS:

**When the fireplace has cooled**, remove the face of the fireplace along with the glass. See MAINTENANCE AND SERVICE - GLASS DOOR REMOVAL. Check the gasket material on the back of the glass, making sure that it is attached and intact.

During a cold start up, condensation will sometimes form on the glass. This is a normal condition with all fireplaces. However, this condensation can allow dust and lint to cling to the glass surface. Initial paint curing of the appliance can leave a slight film behind the glass, a temporary problem. The glass will need cleaning about two weeks after installation. **Use a mild glass cleaner and a soft cloth; abrasive cleaners will damage the glass and plated surfaces.** Depending on the amount of use, the glass should require cleaning no more than two or three times a season. **Do not clean the glass when it is hot.**

## REPLACING GLASS:

The glass in the fireplace is a high temperature ceramic. If the glass is damaged in any way, a factory replacement is required (see PARTS LIST - COMPONENTS). Wear gloves when handling damaged glass door assembly to prevent personal injury. When the glass door assembly is being transported, it must be wrapped in newsprint and tape and/or a strong plastic bag. Do not operate with the glass front removed, cracked or broken. Removal and replacement of the glass from the door **must** be done by a licensed or qualified service person. **The glass must be purchased from an authorized Westgate dealer, part #50-2002. No substitute materials are allowed.**

## BURNER & FIREBOX CLEANING:

**The flow of combustion and ventilation air not to be obstructed.** Periodic maintenance should include cleaning of the firebox, burner and log effects. Refer to the sections on glass door removal, log and or burner installation to remove the glass door, log set (if equipped), burner trim pieces and burners. Using a vacuum with a soft brush attachment, clean out any dust, lint or debris from the floor of the firebox. Using a soft brush, gently remove any dirt or debris from the top surface of the burner. Using the same brush, gently brush away any carbon deposits that have built up on the surface of the logs. Re-install all of these components as shown in the setup / installation portion of this guide. Clean both surfaces of the window glass using commercial glass cleaner and clean soft cloths. Securely re-install the glass door onto the fireplace.



# Warranty for Enviro Gas Products

Sherwood Industries Ltd. ("Sherwood") hereby warrants, subject to the terms and conditions herein set forth, this product against defects in material and workmanship during the specified warranty period starting from the date of original purchase at retail. In the event of a defect of material or workmanship during the specified warranty period, Sherwood reserves the right to make repairs or to arrange the replacement of a defective product at Sherwood's factory. The shipping costs are to be paid by the consumer. All warranties by Sherwood are set forth herein and no claim shall be made against Sherwood on any oral warranty or representation.

## Conditions

- A completed warranty registration must be submitted to Sherwood within 90 days of original purchase via the online warranty registration page or via the mail-in warranty registration card provided. Have the installer fill in the installation data sheet in the back of the manual for warranty and future reference.
- This warranty applies only to the original owner in the original location.
- The unit must have been properly installed by a qualified technician or installer, and must meet all local and national building code requirements.
- The warranty does not cover removal and re-installation costs.
- Sherwood Industries Ltd. reserves the right to make changes without notice.
- Sherwood Industries Ltd. and its employees or representatives will not assume any damages, either directly or indirectly caused by improper usage, operation, installation, servicing or maintenance of this appliance.
- A proof of original purchase must be provided by you or the dealer.

## Exclusions

An expanded list of exclusions is available at [www.enviro.com/shipwarranty.html](http://www.enviro.com/shipwarranty.html)

This warranty does not cover:

- Damage as a result of improper usage or abuse.
- Damage caused from over-firing due to incorrect setup or tampering.
- Damage caused by incorrect installation.

## To the Dealer

- Provide name, address and telephone number of purchaser and date of purchase.
- Provide date of installation, Name of installer and dealer, Serial number of the appliance, Nature of complaint, defects or malfunction, description and part # of any parts replaced.

## To the Distributor

- Sign and verify that work and information are correct.

Sherwood Industries Ltd.

16702 Cliffield Road, Victoria, B.C., Canada V8M 2A3

Online warranty registration: [www.enviro.com/warranty/](http://www.enviro.com/warranty/)

Category	One Year	Two Year	Limited Lifetime (7yr)
Parts <sup>1</sup> & Labour	✓	Parts only	
Firebox Liner Panels (excluding porcelain)	Ceramic/Steel	Ceramic/Steel	Steel
Firebox	✓	✓	✓
Heat Exchanger	✓	✓	✓
Burner	✓	✓	✓
Ceramic Logs <sup>2</sup>	✓	✓	✓
Ceramic Glass <sup>3</sup>	✓		
Pedestal / Legs (excluding finish)	✓	✓	✓
Door Assembly	✓	✓	✓
Surround Panels (excluding finish)	✓	✓	✓
Exterior Panels (excluding finish)	✓	✓	Up to 5 years
Electrical Components	✓	✓	
Exterior Surface Finishing <sup>4</sup>	✓		

<sup>1</sup> Second replacement part – 1 year, labour not included

<sup>2</sup> Log set and panels excludes wear and tear or breakage caused by cleaning or service

<sup>3</sup> Glass is covered only for thermal breakage

<sup>4</sup> Exterior Surface finishing covers plating, enamel or paint and excludes colour changes, chipping, and fingerprints

# INSTALLATION DATA SHEET

The following information must be recorded by the installer for warranty purposes and future reference.

NAME OF OWNER:

\_\_\_\_\_

ADDRESS:

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

PHONE: \_\_\_\_\_

NAME OF DEALER:

\_\_\_\_\_

ADDRESS:

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

PHONE: \_\_\_\_\_

MODEL: \_\_\_\_\_

SERIAL NUMBER: \_\_\_\_\_

DATE OF PURCHASE: \_\_\_\_\_ (dd/mm/yyyy)

DATE OF INSTALLATION: \_\_\_\_\_ (dd/mm/yyyy)

☐ NATURAL GAS (NAT)      ☐ PROPANE(LPG)

INLET GAS PRESSURE: \_\_\_\_\_ in wc

MAIN BURNER ORIFICE: \_\_\_\_\_ # DMS

PILOT ORIFICE # \_\_\_\_\_ OR \_\_\_\_\_ in diam.

INSTALLER'S SIGNATURE:

\_\_\_\_\_

NAME OF INSTALLER:

\_\_\_\_\_

ADDRESS:

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

PHONE: \_\_\_\_\_

MANUFACTURED BY:  
SHERWOOD INDUSTRIES LTD.  
6782 OLDFIELD RD. SAANICHTON, BC, CANADA V8M 2A3  
February 15, 2012  
www.westgatefireplaces.com  
C-13875